



Play value

The rules of the Ball Labyrinth are simple. The round handles are used to tip the playing table to make the ball roll in the corresponding direction. The goal is to get the ball once across the labyrinth. The game is not just fun but also promotes dexterity and patience, something that is particularly important for children and seniors. In addition, the game requires concentration and perfect coordination.


Barrier-free

- independent play

Ball Labyrinth



9.15100

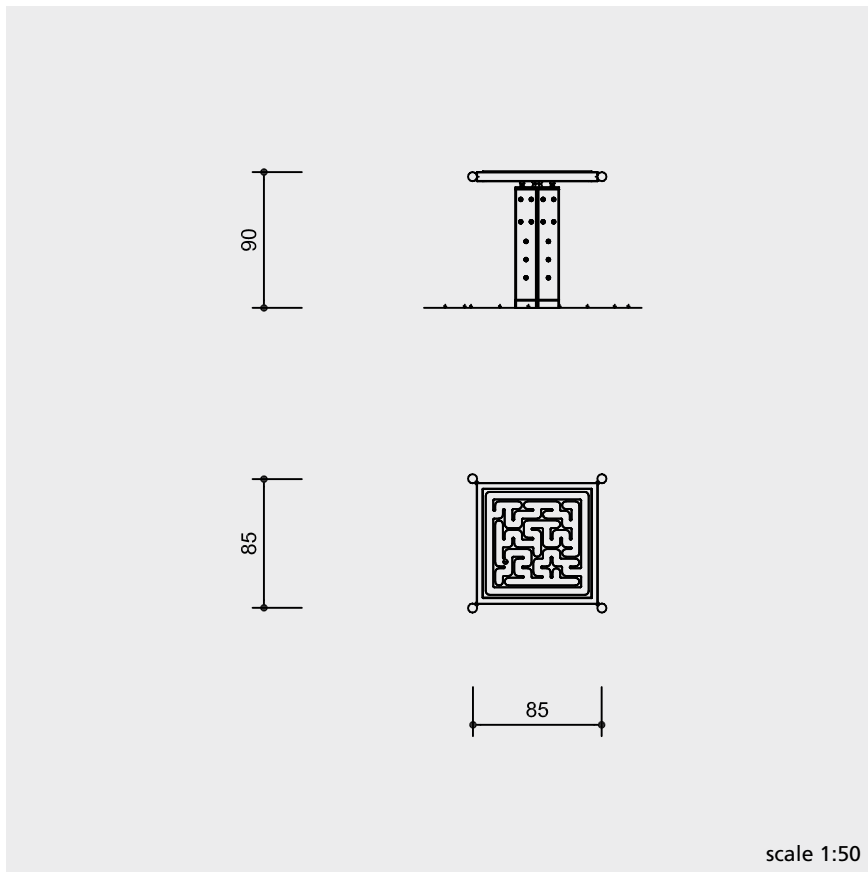

safety check according to EN 1176

Components

- 1 ball labyrinth
- 1 support post with
- 4 foundation anchors

Installation information

Surfacing requirements
no requirements

Recommended space
including safety distances
2.90 x 2.90 m

Foundations
1 item 60 x 70 x 40 cm
excavation depth 60 cm

Attention:
Exact measurements may vary; for all installation dimensions refer to current assembly instructions.
Technical changes reserved.

Technical information

core-free

sawn timbers of non-impregnated mountain larch, core-free, thus decreasing occurrences of cracking



adjustable

easy to maintain, no projecting threads after re-tightening due to two-piece bolt connection



ground anchor

foundation anchor made of phenol resin paper based laminate



sandwich construction frame, oiled, non-positive fitting

stainless steel frame, glass bead blasted

guide plate for sphere made of plastic

covered with (toughened) safety glass, 10 mm

play table with bearing on rubber buffers for controlled swinging movements

handle balls made of polyurethane (PUR)

Dimensions

(small deviations possible)

height	0.90 m
length	0.85 m
width	0.85 m
play area	0.72 x 0.72 m
thickness of safety glass	10 mm
weight	100 kg

Please refer to the price list for a more detailed explanation of the quality characteristics.



9.15100